

# NFS2-640

## Intelligent Addressable Fire Alarm System



Intelligent Fire Alarm Control Panels

### General

The NFS2-640 intelligent Fire Alarm Control Panel is part of the ONYX® Series of Fire Alarm Controls from NOTIFIER.


As a stand-alone small-to-large system, or as a large network, the ONYX Series of products meets virtually every application requirement.

Designed with modularity and for ease of system planning, the NFS2-640 can be configured with just a few devices for small building applications, or for a large campus or high-rise application. Simply add additional peripheral equipment to suit the application.

**NOTE:** Unless called out with a version-specific "E" at the end of the part number, "NFS2-640" refers to models NFS2-640 and NFS2-640E; similarly, "CPU2-640" refers to models CPU2-640 and CPU2-640E.

### Features

- Listed to UL Standard 864, 9th edition.
- One, expandable to two, isolated intelligent Signaling Line Circuit (SLC) Style 4, 6 or 7.
- Up to 159 detectors (any mix of ion, photo, thermal, or multi-sensor) and 159 modules (Addressable pull stations, normally open contact devices, two-wire smoke, notification, or relay) per SLC. 318 devices per loop/636 per FACP or network node.
- Standard 80-character display, 640-character large display, or display-less (a node on a network).
- Network option — 103 nodes supported (AFP-200, AFP-300/400, NFS-320, NFS-640, NFS2-640, AFP1010, AM2020, NFS-3030, NFS2-3030, NCA/NCA-2 Network Annunciator, DVC-EM, NCS Network Control Station, or ONYXWorks™ Network Control Station) using wire or fiber-optic connections.
- 6.0 amp switch mode power supply with four Class A/B built-in Notification Appliance Circuits (NAC). Selectable System Sensor, Wheelock, or Gentex strobe synchronization.
- Built-in Alarm, Trouble, Security, and Supervisory relays.
- VeriFire® Tools online or offline programming utility. Upload/Download, save, store, check, compare, and simulate panel databases. Upgrade panel firmware.
- Autoprogramming and Walk Test reports.
- Optional universal 636-point DACT.
- 80-character remote annunciators (up to 32).
- EIA-485 annunciators, including custom graphics.
- Printer interface (80-column and 40-column printers).
- History file with 800-event capacity in nonvolatile memory, plus separate 200-event alarm-only file.
- Alarm Verification selection per point, with tally.
- Autoprogramming and Walk Test reports.
- Presignal/Positive Alarm Sequence (PAS).
- Silence inhibit and Auto Silence timer options.
- March time/temporal/California two-stage coding/strobe synchronization.
- Field-programmable on panel or on PC, with VeriFire Tools program check, compare, simulate.
- Full QWERTY keypad.
- Battery charger supports 18 – 200 amp hour batteries.
- Non-alarm points for lower priority functions.

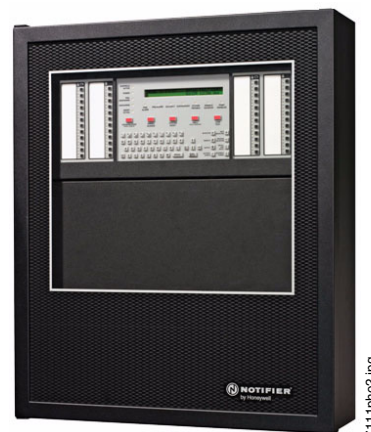

NFS2-640

- Remote ACK/Signal Silence/System Reset/Drill via monitor modules.
- Automatic time control functions, with holiday exceptions.
- Surface Mount Technology (SMT) electronics.
- Extensive, built-in transient protection.
- Powerful Boolean logic equations.

#### NCA-2 640-CHARACTER DISPLAY FEATURES:

- Backlit, 640-character display.
- Supports SCS Series smoke control system in both HVAC or FSCS modes (not UL-Listed for FSCS).
- Printer and CRT EIA-232 ports.
- EIA-485 annunciator and terminal mode ports.
- Alarm, Trouble, Supervisory, and Security relays.

#### FLASHSCAN® INTELLIGENT FEATURES:

- Poll 318 devices in less than two seconds.
- Activate up to 159 outputs in less than five seconds.
- Multicolor LEDs blink device address during Walk Test.
- Fully digital, high-precision protocol (U.S. Patent 5,539,389).
- Manual sensitivity adjustment — nine levels.
- Pre-alarm ONYX intelligent sensing — nine levels.
- Day/Night automatic sensitivity adjustment.
- Sensitivity windows:
  - Ion – 0.5 to 2.5%/foot obscuration.
  - Photo – 0.5 to 2.35%/foot obscuration.
  - Laser (VIEW®) – 0.02 to 2.0%/foot obscuration.
  - Acclimate Plus™ – 0.5 to 4.0%/foot obscuration.
  - HARSH™ – 0.5 to 2.35%/foot obscuration.
  - IntelliQuad™ – 1.0 to 4.0%/foot obscuration.
- Drift compensation (U.S. Patent 5,764,142).
- Degraded mode — in the unlikely event that the CPU2-640 microprocessor fails, FlashScan detectors revert to degraded operation and can activate the CPU2-640 NAC circuits and alarm relay. Each of the four built-in panel circuits includes a Disable/Enable switch for this feature.
- Multi-detector algorithm involves nearby detectors in alarm decision (U.S. Patent 5,627,515).

- Automatic detector sensitivity testing (NFPA-72 compliant).
- Maintenance alert (two levels).
- Self-optimizing pre-alarm.

**FSC-851 INTELLIQUAD  
ADVANCED MULTI-CRITERIA DETECTOR**

- Detects all four major elements of a fire (smoke, heat, CO, and flame)
- Automatic drift compensation of smoke sensor and CO cell
- High nuisance-alarm immunity
- Six sensitivity levels

**VIEW (VERY INTELLIGENT EARLY WARNING)  
SMOKE DETECTION TECHNOLOGY:**

- Revolutionary spot laser design.
- Advanced ONYX intelligent sensing algorithms differentiate between smoke and non-smoke signals (U.S. Patent 5,831,524).
- Addressable operation pinpoints the fire location.
- No moving parts to fail or filters to change.
- Early warning performance comparable to the best aspiration systems at a fraction of the lifetime cost.

**ACCLIMATE PLUS  
LOW-PROFILE INTELLIGENT MULTI-SENSOR:**

- Detector automatically adjusts sensitivity levels without operator intervention or programming. Sensitivity increases with heat.
- Microprocessor-based technology; combination photo and thermal technology.
- FlashScan or classic mode compatible.

- Low-temperature warning signal at 40°F ± 5°F (4.44°C ± 2.77°C).

**HARSH HOSTILE-AREA SMOKE HEAD:**

- Provides early warning of smoke detection in environment where traditional smoke detectors are not practical.
- The detector's filters remove particulates down to 30 microns in size.
- Intake fan draws air into photo chamber, while airborne particles and water mist are removed.
- Requires auxiliary 24 VDC from system or remote power supply.

**RELEASING FEATURES:**


- Ten independent hazards.
- Sophisticated cross-zone (three options).
- Delay timer and Discharge timers (adjustable).
- Abort (four options).
- Low-pressure CO<sub>2</sub> listed.

**VOICE AND TELEPHONE FEATURES:**

- Up to eight channels of digital audio.
- 50 and 75 watt digital amplifiers (DAA series).
- Solid-state digital message generation.
- Firefighter telephone option.
- 30- to 120-watt high-efficiency amplifiers (AA Series).
- Backup tone generator and amplifier option.
- Multichannel voice transponder (XPIQ).

**HIGH-EFFICIENCY OFFLINE SWITCHING  
3.0 AMP POWER SUPPLY (6.0 A IN ALARM):**

- 120 VAC (NFS2-640); 240 VAC (NFS2-640E).
- Displays battery current/voltage on panel (with display).

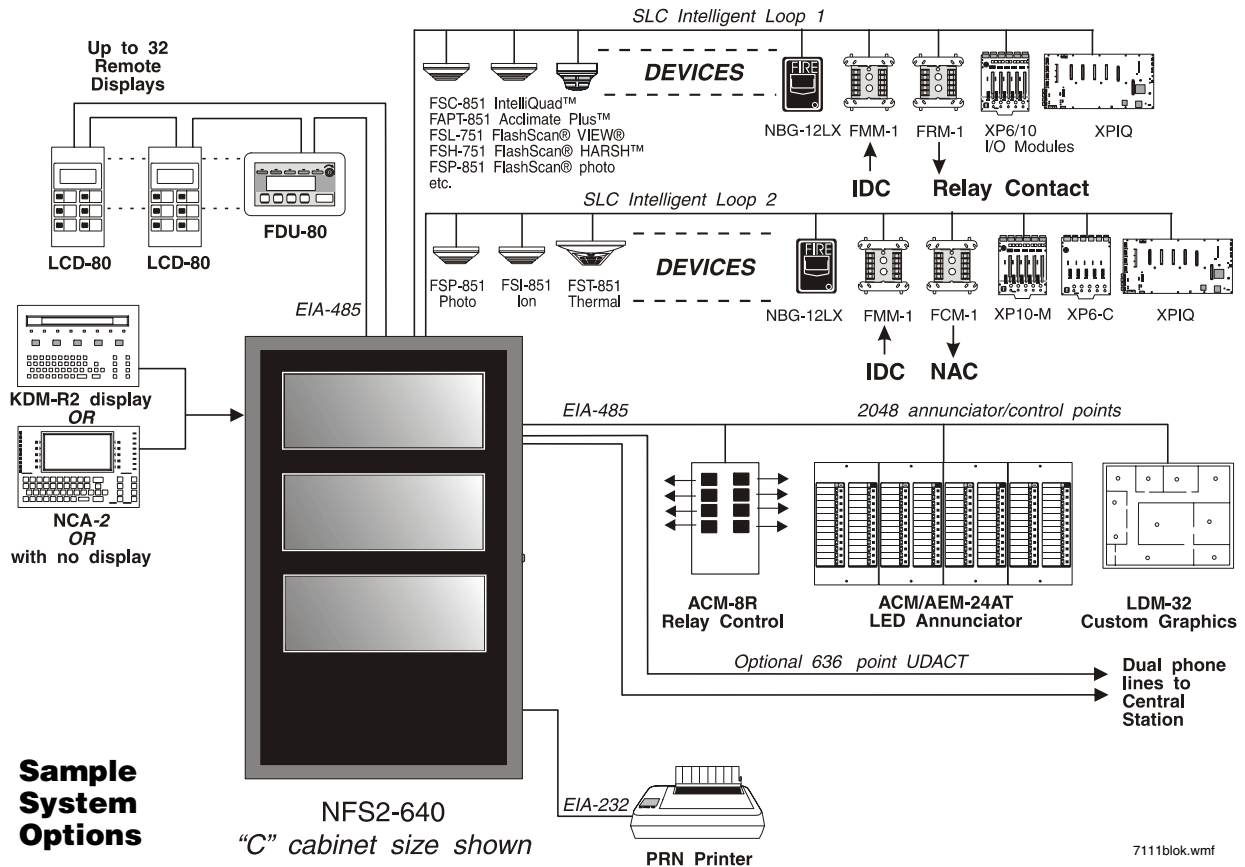

**Sample System Options**

NFS2-640  
"C" cabinet size shown

7111blok.wmf

## FlashScan, Exclusive New World-Leading Detector Protocol

At the heart of the NFS2-640 is a set of detection devices and device protocol — FlashScan (U.S. Patent 5,539,389). FlashScan is an all-digital protocol that gives superior precision and high noise immunity.

In addition to providing quick identification of an active input device, this new protocol can also activate many output devices in a fraction of the time required by competitive protocols. This high speed also allows the NFS2-640 to have the largest device per loop capacity in the industry — 318 points — yet every input and output device is sampled in less than two seconds. The microprocessor-based FlashScan detectors have bicolor LEDs that can be coded to provide diagnostic information, such as device address during Walk Test.

## ONYX Intelligent Sensing

Intelligent sensing is a set of software algorithms that provides the NFS2-640 with industry-leading smoke detection capability. These complex algorithms require many calculations on each reading of each detector, and are made possible by the high-speed microcomputer used by the NFS2-640.

**Drift Compensation and Smoothing:** Drift compensation allows the detector to retain its original ability to detect actual smoke, and resist false alarms, even as dirt accumulates. It reduces maintenance requirements by allowing the system to automatically perform the periodic sensitivity measurements required by NFPA 72. Smoothing filters are also provided by software to remove transient noise signals, such as those caused by electrical interference.

**Maintenance Warnings:** When the drift compensation performed for a detector reaches a certain level, the performance of the detector may be compromised, and special warnings are given. There are three warning levels: (1) Low Chamber value; (2) Maintenance Alert, indicative of dust accumulation that is near but below the allowed limit; (3) Maintenance Urgent, indicative of dust accumulation above the allowed limit.

**Sensitivity Adjust:** Nine sensitivity levels are provided for alarm detection. These levels can be set manually, or can change automatically between day and night. Nine levels of pre-alarm sensitivity can also be selected, based on predetermined levels of alarm. Pre-alarm operation can be latching or self-restoring, and can be used to activate special control functions.

**Self-Optimizing Pre-Alarm:** Each detector may be set for “Self-Optimizing” pre-alarm. In this special mode, the detector “learns” its normal environment, measuring the peak analog readings over a long period of time, and setting the pre-alarm level just above these normal peaks.

**Cooperating Multi-Detector Sensing:** A patented feature of ONYX intelligent sensing is the ability of a smoke sensor to consider readings from nearby sensors in making alarm or pre-alarm decisions. Without statistical sacrifice in the ability to resist false alarms, it allows a sensor to increase its sensitivity to actual smoke by a factor of almost two to one.

## Field Programming Options

**Autoprogram** is a timesaving feature of the NFS2-640. It is a special software routine that allows the NFS2-640 to “learn” what devices are physically connected and automatically load them in the program with default values for all parameters. Requiring less than one minute to run, this routine allows the user to have almost immediate fire protection in a new installation, even if only a portion of the detectors are installed.

**Keypad Program Edit (with KDM-R2)** The NFS2-640, like all NOTIFIER intelligent panels, has the exclusive feature of program creation and editing capability from the front panel keypad, **while continuing to provide fire protection**. The architecture of the NFS2-640 software is such that each point entry carries

its own program, including control-by-event links to other points. This allows the program to be entered with independent per-point segments, while the NFS2-640 simultaneously monitors other (already installed) points for alarm conditions.

**VeriFire Tools** is an offline programming and test utility that can greatly reduce installation programming time, and increase confidence in the site-specific software. It is Windows®-based and provides technologically advanced capabilities to aid the installer. The installer may create the entire program for the NFS2-640 in the comfort of the office, test it, store a backup file, then bring it to the site and download from a laptop into the panel.

ENTER PROG OR STAT PASSWORD, THEN ENTER  
<ESCAPE TO ABORT> \*\*\*\*\*


0=CLR 1= AUTO 2=POINT 3=PASSWORD 4=MESSAGE  
5=ZONES 6=SPL FUNCT 7=SYSTEM 8=CHECK PRG

Above: Keypad program editing

Below: Autoprogram function

AUTOPROGRAM PLEASE WAIT

L1:80 DETS, 15 MODS L2:93 DETS, 35 MODS  
BELLS: 04

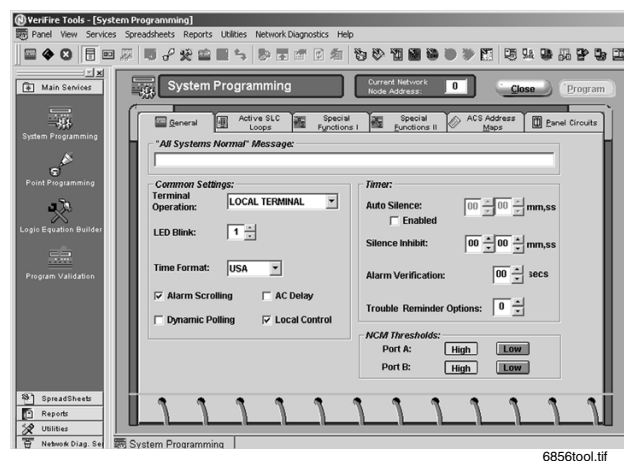


VeriFire Tools System Programming screen

# CPU2-640 Board Diagram

**TB10:** DC Power (24 VDC, power-limited); Non-Resettable, Resettable.  
**TB11:** EIA-485 Connection (supervised); Terminal Mode, ACS Mode.  
**TB12:** EIA-232 Connection; Printer, PC/Terminal (CRT).

**J1:** Network/Service Connection (NUP), power-limited, supervised.  
**J2:** USB A VeriFire Tools Connection.  
**J3:** USB B VeriFire Tools Connection.

All NAC circuits are power-limited, supervised.

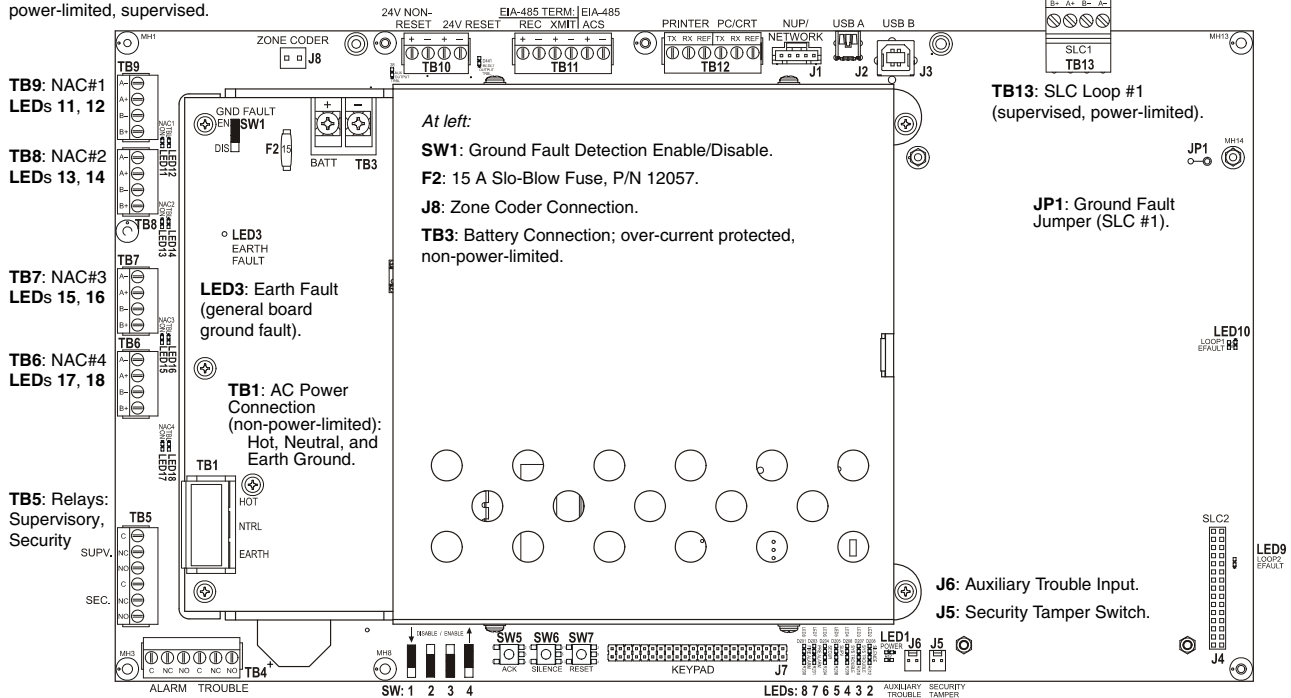

**TB4:** Alarm Relay, Trouble Relay. Output relays; power-limited only if connected to a power-limited source.

**SW1, SW2, SW3, SW4:** Disable-Enable switches for Backup Alarm, NACs 1 – 4 respectively.  
**SW5:** Acknowledge  
**SW6:** Silence  
**SW7:** Reset


System switches, "No Keyboard Operation":  
**J7:** KDM-R2 Connection

**LED1:** Power On (AC or battery)  
**LED2:** Signals Silenced  
**LED3:** Point Disabled  
**LED4:** System Trouble  
**LED5:** Supervisory  
**LED6:** Security  
**LED7:** Pre-Alarm  
**LED8:** Fire Alarm

**LED10:** SLC Loop #1 Ground Fault.  
**LED9:** SLC Loop #2 Ground Fault.  
**J4:** LEM-320 Connector for SLC Loop #2.

7111bord.wmf

# Network Diagram

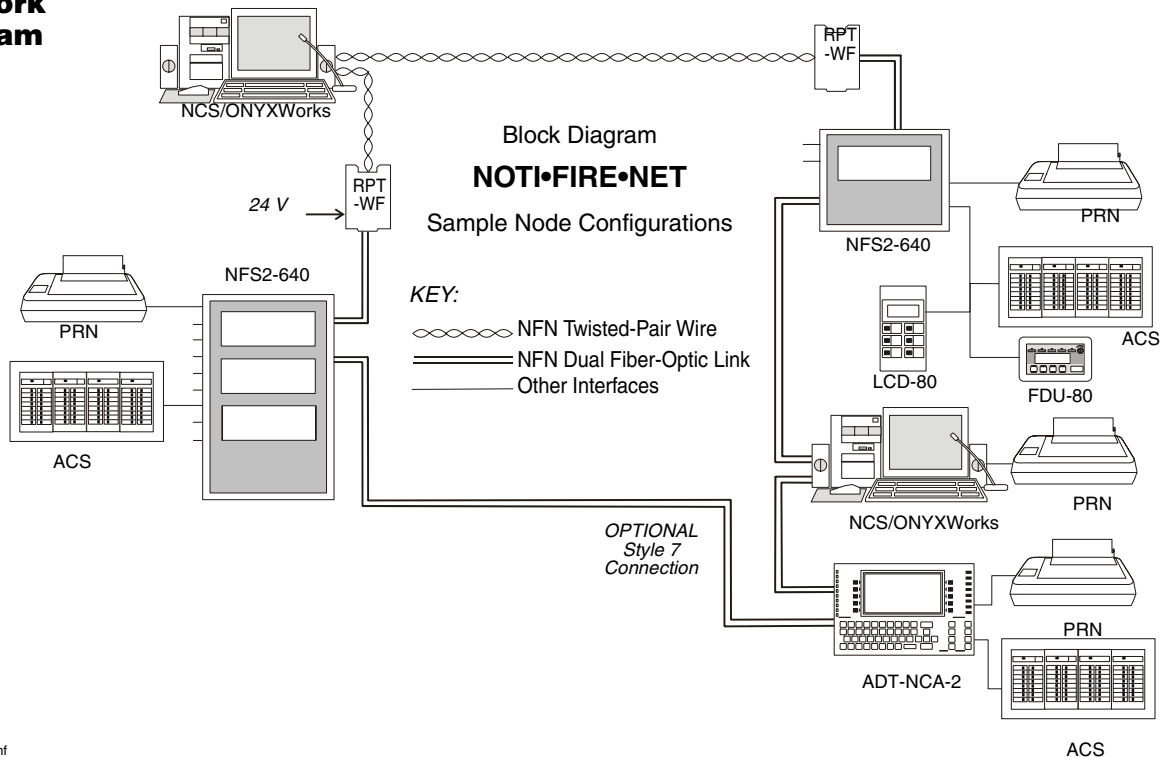

7111conf.wmf

## Placement of Equipment in Chassis and Cabinet

The following guidelines outline the NFS2-640's flexible system design.

**Rows:** The first row of equipment in the cabinet mounts in chassis **CHS2-M2** (ships with the CPU). Mount the second, third, or fourth rows of equipment in a CHS4 series chassis or, for Digital Voice Command products, in **CA-1** or **CA-2**. (For DVC and DAA components see DVC Manual; for DVC-AO applications, see AA Series Installation Manual).


**Wiring:** When designing the cabinet layout, consider separation of power-limited and non-power-limited wiring as discussed in the NFS2-640 Installation Manual.

**Positions:** A chassis offers four basic side-by-side positions for components; the number of modules that can be mounted in each position depends on the chassis model and the size of the individual module. There are a variety of standoffs and hardware items available for different combinations and configurations of components.

It is critical that all mounting holes of the NFS2-640 are secured with a screw or standoff to ensure continuity of Earth Ground.

**Layers:** The CHS2-M2 accepts four layers of equipment, including the control panel. The **CPU2-640** fills three positions (left to right) in the first-installed layer (the back of the chassis); its integral power supply occupies the center two positions in the next two layers; the optional display occupies (the left) two positions at the front, flush with the door. Some equipment, such as the **NCA-2**, may be mounted in the dress panel directly in front of the control panel. The NCA-2 can be used as a primary display for the NFS2-640 (use NCA/640-2-KIT) by directly connecting their network ports (required in Canadian stand-alone applications); see NCA-2 data sheet for mounting options (*DN-7047*).

**Expansion:** Installing an **LEM-320** Loop Expander Module adds a second SLC loop to the control panel. The LEM-320 is mounted onto the CPU2-640, occupying the middle-right, second (back) slot on the chassis. If networking two or more control panels, each unit requires a **NCM-W** (wire) or **NCM-F** (fiber) Network Control Module. The NCM-W/-F can be installed in any panel output module position (see manual); the default position is at the back of the chassis next to the control panel. **Option boards** can be mounted in front of the LEM-320 or NCM modules; for ease of access, complete installation of those devices before mounting another layer.

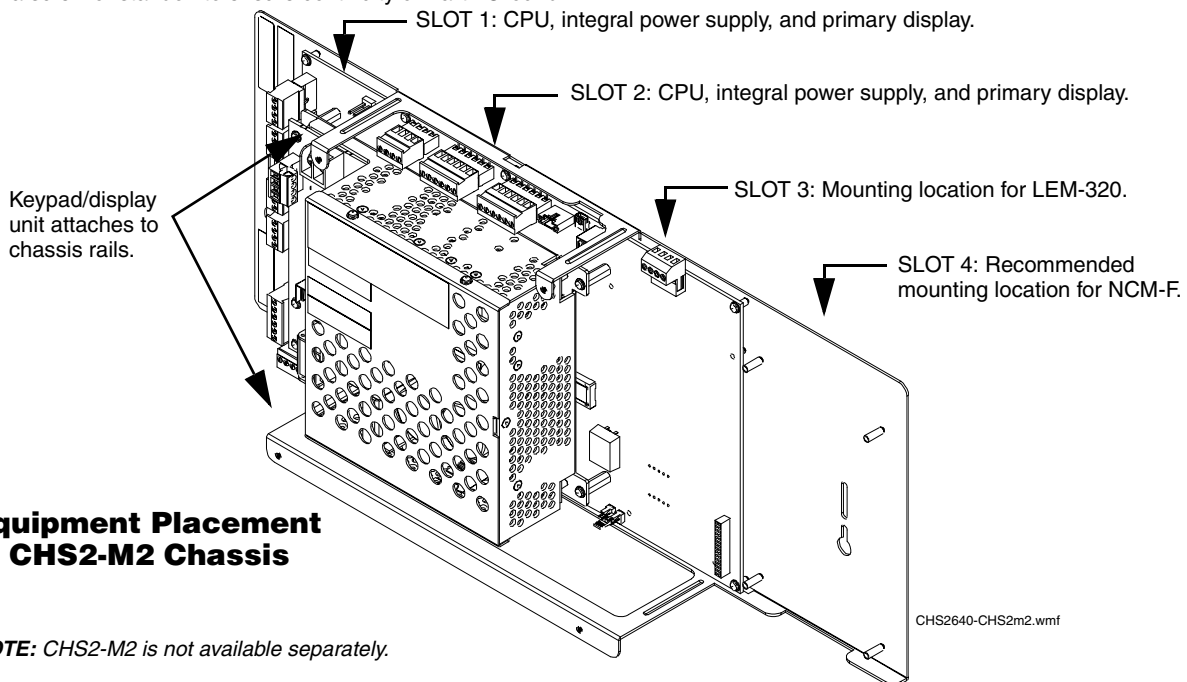

## Equipment Placement in CHS2-M2 Chassis

**NOTE:** CHS2-M2 is not available separately.


## KDM-R2 Controls and Indicators

**Program Keypad:** QWERTY type (keyboard layout, at right).

**12 LED indicators:** Power; Fire Alarm; Pre-Alarm; Security; Supervisory; System Trouble; Signals Silenced; Points Disabled; Control Active; Abort; Pre-Discharge; Discharge.

**Keypad Switch Controls:** Acknowledge/Scroll Display; Signal Silence; Drill; System Reset; Lamp Test.

**LCD Display:** 80 characters (2 x 40) with long-life LED backlight (see illustration below).

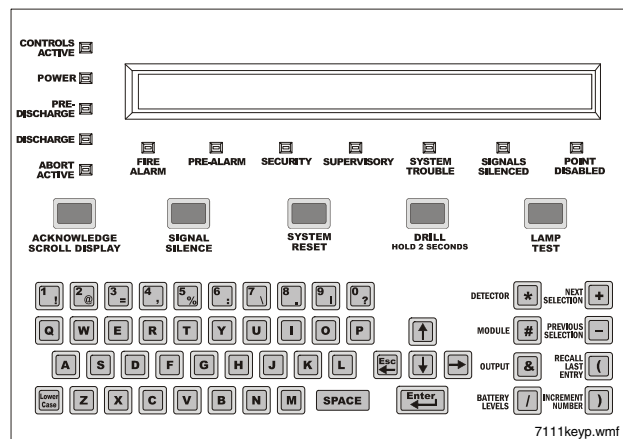



## Configuration Guidelines

*Stand-alone and network systems require a main display. On single-CPU systems (one CPU2-640/-640E), display options are the KDM-R2 or the NCA-2. On network systems (two or more CPU2-640/640E panels), at least one NCA-2 or NCS/ONYX-Works annunciation device is required. Other options listed as follows:*

**KDM-R2:** 80-character backlit LCD display with QWERTY programming and control keypad. Order two BMP-1 blank modules and DP-DISP2 mounting plate separately. *Requires top row of a cabinet. Required for each stand-alone 80-character display system. The KDM-R2 may mount in network nodes to display "local" node information as long as at least one NCA-2 or NCS/ONYXWorks network display is on the system to display network information.*

**NCA-2:** Network Control Annunciator, 640 characters. On single CPU2-640/-640E systems, the optional NCA-2 can be used as the Primary Display for the panel and connects directly to the CPU2-640/-640E. On network systems (two or more CPU2-640/-640Es), one network display (either NCA-2 or NCS/ONYX-Works) is required for every system. On network systems, the NCA connects (and requires) an NCM network communications module. Mounts in a row of FACP node or in two annunciator positions. Mounting options include the DP-DISP2, ADP-4B, or in an annunciator box, such as the ABS-2D. In CAB-4 top-row applications, a DP-DISP2 and two BMP-1 blank modules are required for mounting. Required for NFS2-640 applications employing the DVC-EM and DAA series amplifiers. *See DN-7047.*

**CPU2-640:** Central processing unit with integral 3.0 amp (6.0 A in alarm) power supply for an NFS2-640 system. Includes CPU factory-mounted to chassis **CHS2-M2**; one Signaling Line Circuit expandable to two; installation, programming and operating manuals. *Order one per system or as necessary (up to 103 network nodes) on a network system.*

**CPU2-640E:** Same as CPU2-640 but requires 240 VAC, 1.5 amp, (3.0 A in alarm).

**NCA/640-2-KIT:** Bracket installation kit required to mount NCA-2 to CHS2-M2 chassis with CPU2-640/-640E.

**DP-DISP2:** Dress panel for top row in cabinet with CPU2-640/640E installed.

**ADP2-640:** Dress panel for middle rows with CPU2-640/640E.

**BMP-1:** Blank module for unused module positions.

**BP2-4:** Battery plate, required.

### AUDIO OPTIONS

**DVC-EM:** Digital Voice Command, digital audio processor with message storage for up to 32 minutes of standard quality (4 minutes at high quality) digital audio. Capable of playing up to eight simultaneous messages when used with DAA Series amplifiers. *See DN-7045.*

**DVC-KD:** Keypad for local annunciation and controls; status LEDs and 24 user-programmable buttons. *See DN-7045.*

**DVC-AO:** DVC Analog Output board provides four analog output circuits for use with AA or XPIQ Series amplifiers. Four-channel operation supported. *See DN-7045.*

**DAA-5025:** 25 Vrms Digital Audio Amplifier assembly with DAA-PS power supply board, shipped mounted to its chassis. *See DN-7046.*

**DAA-5070:** 70.7 Vrms Digital Audio Amplifier assembly with DAA-PS power supply board, shipped mounted to its chassis. *See DN-7046.*

**DAA-7525:** 25 Vrms Digital Audio Amplifier assembly with DAA-PS power supply board. Shipped mounted to its chassis (no battery charger on DAA-7525 power supply board). *See DN-60257.*

**CHS-BH1:** Battery chassis; holds two 12.0 AH batteries. Mounts one the left side of DAA chassis. *See DN-7046.*

**CA-1:** Chassis, occupies one tier of a CAB-4 Series enclosure. The left side accommodates one DVC and a DVC-KD (optional); and the right side houses a CMIC-1 microphone and its well (optional). *See DN-7045.*

**CA-2:** Chassis assembly, occupies two tiers of a CAB-4 Series enclosure. The left side accommodates one DVC mounted on a half-chassis and one NCA-2 or BP-CA2 mounted on a half-chassis. The right side houses a microphone/handset well. The CA-2 assembly includes CMIC-1 microphone. ADDR Series doors with two-tier visibility are available for use with the CA-2 configuration: ADDR-B4, ADDR-C4, ADDR-D4 (below).

**TELH-1:** Firefighter's Telephone Handset for use with the DVC-EM when mounted in the CA-2 chassis. *See DN-7045.*

**ADDR-B4NOTE::** Two-tier-sized door designed for use with the CA-2 chassis configuration. ADDR Series doors are similar to CAB-4 Series "DR" doors, but a clear window space exposes the top two tiers of the CAB-4 enclosure. Use an SBB-B4 backbox with the ADDR-B4. *See DN-7045, DN-6857.*

**ADDR-C4NOTE::** Three-tier-sized door, designed for use with the CA-2 chassis configuration. ADDR Series doors are similar to CAB-4 Series "DR" doors, but a clear window space exposes the top two tiers of the CAB-4 enclosure. Use an SBB-C4 backbox with the ADDR-C4. *See DN-7045, DN-6857.*

**ADDR-D4NOTE::** Four-tier-sized door designed for use with the CA-2 chassis configuration. ADDR Series doors are similar to CAB-4 Series "DR" doors, but a clear window space exposes the top two tiers of the CAB-4 enclosure. Use an SBB-D4 backbox with the ADDR-D4. *See DN-7045, DN-6857.*

**NOTE:** Use ADDR-B4/C4/D4 when CA-2 chassis is installed in top two rows with NCA-2 or BP-CA2. Use standard door when CA-2 is not installed in top two rows. *Please see the DVC application guide for additional configuration information.*

**DPA-1:** Dress panel, used with the CA-1 chassis when configured with a DVC, DVC-KD, and CMIC-1. *See DN-7045.*

**DPA-2B:** Dress panel used with CA-2 chassis assembly.

**VP-2B:** Dress panel, required when CA-2 chassis is installed in one of the top two cabinet rows.

**DPA-1A4:** Dress panel, used with the CA-1 chassis when the CMIC-1 is not used. Provides mounting options on right two bays for two ACS annunciators, or for blank plates. *See DN-7045.*

**BP-CA2:** Blank plate for CA-2 chassis, used for NFS2-640 Firefighters Telephone Applications with no NCA-2.

**CMIC-1:** Optional microphone and microphone well assembly used with the CA-1 chassis.

**RM-1/RM-1SA:** Remote microphone assemblies, mount on ADP-4 (RM-1) dress panel or CAB-RM/-RMR (RM-1SA) stand-alone cabinets. *See DN-6728.*

**FTM-1:** Firephone Control Module connects a remote firefighter telephone to a centralized telephone console. Reports status to panel. Wiring to jacks and handsets is supervised.

**AA-30:** Audio Amplifier, 30 watts. Switch-mode power. Includes amplifier and audio input supervision, backup input, and automatic switchover, power supply, cables. *See AA Series data sheet, DN-3224.*

**AA-120/AA-100:** Audio Amplifier provides up to 120 watts of 25 VRMS audio power for the NFS-640. The amplifier contains an integral chassis for mounting to a CAB-B4, -C4, or -D4 backbox (consumes one row). Switch-mode power. Includes audio input and amplified output supervision, backup input, and automatic switchover to backup tone. Order the AA-100 for 70.7 VRMS systems and 100 watts of power. *See AA Series data sheet, DN-3224.*

**XPIQ:** The XPIQ quad intelligent voice transponder for distributed multichannel voice evacuation systems, an integrated

audio amplification and distribution subsystem controlled by FACP. Capable of playing up to four simultaneous messages. Accepts up to four 25-watt amplifiers. *See XPIQ data sheet, DN-6823.*

### **POWER SUPPLIES, STANDARD CABINETS**

**ACPS-610:** 6.0 or 10 Amp addressable charging power supply. *See DN-60244.*

**FCPS-24S6/S8:** Remote six-amp and eight-amp power supplies with battery charger. *See FCPS-24S6/-24S8 data sheet, DN-6927.*

**CHS-4:** Chassis for mounting up to four APS-6Rs.

**CHS-4L:** Low-profile four-position Chassis. Mounts two AA-30 amplifiers or one AMG-E and one AA-30.

**DP-1B:** Blank Dress panel. Provides dead-front panel for unused tiers or to cover AA-30, AA-120, or one AMG-E and one AA-30.

**CAB-4 Series:** The CAB-4 Series cabinets are fabricated from 16-gauge steel with unique full-front LEXAN®, reverse-silk-screened for durability. The cabinet assembly consists of two basic parts: a Backbox (SBB\_4), and a Locking Door (DR\_4) that may hinge right or left. Cabinets are available in four sizes, "A" through "D", with one to four tiers. A trim ring option is available for semi-flush mounting. *See CAB-4 Series data sheet, DN-6857.*

### **COMPATIBLE DEVICES, EIA-232 PORTS**

**PRN-6:** 80-column printer. *See DN-6956.*

**VS4095/S2:** Printer, 40-column, 24V. Mounted in external backbox. *See DN-3260.*

### **COMPATIBLE DEVICES, EIA-485 PORTS**

**ACS:** Annunciator Control Modules ACM/AEM-24AT and ACM/AEM-48A; remote serial annunciator/control systems. *See data sheets, DN-0524 and DN-6862.*

**ACM-24AT:** ONYX Series ACS annunciator – up to 96 points of annunciation with Alarm or Active LED, Trouble LED, and switch per circuit. Active/Alarm LEDs can be programmed (by powered-up switch selection) by point to be red, green, or yellow; the Trouble LED is always yellow. *See DN-6862.*

**AEM-24AT:** Same LED and switch capabilities as ACM-24AT, expands the ACM-24AT to 48, 72, or 96 points. *See DN-6862.*

**ACM-48A:** ONYX Series ACS annunciator – up to 96 points of annunciation with Alarm or Active LED per circuit. Active/Alarm LEDs can be programmed (by powered-up switch selection) in groups of 24 to be red, green, or yellow. Expandable to 96 points with one AEM-48A. *See DN-6862.*

**AEM-48A:** Same LED capabilities as ACM-48A, expands the ACM-48A to 96 points. *See DN-6862.*

**LCD-80/FDU-80:** 80-character, backlit LCD display. Mounts up to 6,000 ft. (1828.8 m) from panel. Up to 32 per FACP. *See LCD-80/-80TM (DN-3198) and FDU-80 (DN-6820).*

**LDM:** Lamp Driver Modules LDM-32, LDM-E32, and LDM-R32; remote custom graphic driver modules. *See LDM data sheet DN-0551.*

**ACM-8R:** Remote Relay Module with eight Form-C contacts. Can be located up to 6,000 ft. (1828.8 m) from panel on four wires. *See ACM-8R data sheet DN-3558.*

**SCS:** Smoke control stations SCS-8, SCE-8, with lamp drivers SCS-8L, SCE-8L; eight (expandable to 16) circuits. *See SCS data sheet DN-4818.*

**TM-4:** Transmitter Module. Includes three reverse-polarity circuits and one municipal box circuit. Mounts in panel module position (single-address-style) or in CHS2-M2 position. *See DN-6860.*

**UDACT:** Universal Digital Alarm Communicator Transmitter, 636 channel. *See DN-4867.*

**UZC-256:** Programmable Universal Zone Coder provides positive non-interfering successive zone coding. Microprocessor-controlled, field-programmable from IBM®-compatible PCs (requires optional programming kit). Up to 256 programmable codes. *See UZC-256 data sheet, DN-3404.*

### **COMPATIBLE INTELLIGENT DEVICES**

**BEAMHK:** Heating kit for transmitter/receiver unit of FSB-200(S) below. *See DN-6985.*

**BEAMHKR:** Heating kit for use with the reflector of FSB-200(S) below. *See DN-6985.*

**BEAMLRK:** Long-range accessory kit, FSB-200(S) below.

**BEAMMKR:** Multi-mount kit, FSB-200(S) below.

**BEAMSMK:** Surface-mount kit, FSB-200(S) below.

**FSB-200:** Intelligent beam smoke detector. *See DN-6985.*

**FSB-200S:** Intelligent beam smoke detector with integral sensitivity test. *See DN-6985.*

**FSC-851:** FlashScan IntelliQuad Advanced Multi-Criteria Detector. *See DN-60412.*

**FSP-851:** Low-profile FlashScan photoelectric detector, will replace FSP-751. *See DN-6935.*

**FST-851:** FlashScan thermal detector 135°F (57°C), will replace FST-751. *See DN-6936.*

**FST-851R:** FlashScan thermal detector 135°F (57°C) with rate-of-rise, will replace FST-751R. *See DN-6936.*

**FST-851H:** FlashScan 190°F (88°C) high-temperature thermal detector. *See DN-6936.*

**FSD-751PL:** Low-flow FlashScan photo duct detector with housing, will replace FSD-751P. *See DN-6955.*

**FSD-751RPL:** Low-flow FlashScan photo duct detector with relay and housing, will replace FSD-751RPL. *See DN-6955.*

**FAPT-851:** FlashScan Acclimate Plus low-profile multi-sensor detector, will replace FAPT-751. *See DN-6937.*

**FSH-751:** FlashScan HARSH Hostile Area Smoke Head. *See DN-6875.*

**FSL-751:** FlashScan VIEW laser photo detector, will replace LPX-751. *See DN-6886.*

**B224RB:** Low-profile relay base. *See DN-60054.*

**B224BI:** Isolator base for low-profile detectors. *See DN-60054.*

**B710LP:** Low-profile base. Standard U.S. style. *See DN-60054.*

**B501:** European-style, 4" (10.16 cm) base. *See DN-60054.*

**B501BH-2:** Standard sounder base. Replaces B501BH. *See DN-60054.*

**B501BHT-2:** Temporal tone sounder base. Replaces B501BHT. *See DN-60054.*

**FMM-1:** FlashScan monitor module. *See DN-6720.*

**FDM-1:** FlashScan dual monitor module. *See DN-6720.*

**FZM-1:** FlashScan two-wire detector monitor module. *See DN-6720.*

**FMM-101:** FlashScan miniature monitor module. *See DN-6720.*

**FCM-1-REL:** FlashScan releasing control module. *See DN-60390.*

**FCM-1:** FlashScan NAC control module. *See DN-6724.*

**FRM-1:** FlashScan relay module. *See DN-6724.*

**NBG-12LX:** Manual fire alarm station, addressable. *See DN-6726.*

**ISO-X:** Isolator module. *See DN-2243.*

**XP6-C:** FlashScan six-circuit supervised control module. *See DN-6924.*

**XP6-MA:** FlashScan six-zone interface module; connects intelligent alarm system to two-wire conventional detection zone. See *DN-6925*.

**XP6-R:** FlashScan six-relay (Form-C) control module. See *DN-6926*.

**XP10-M:** FlashScan ten-input monitor module. See *DN-6923*.

## Other Options

**DPI-232:** Direct Panel Interface, specialized modem for extending serial data links to remotely located FACPs and/or peripherals. See *DN-6870*.

**LEM-320:** Loop Expander Module. Expands each NFS2-640 to two Signaling Line Circuits. See *DN-6881*.

**NCM-W:** Network Communications Module, Wire. Order one NCM per network node (CPU-640, CPU2-640,NCA, NCA-2). See *DN-6861*.

**NCM-F:** Network Communications Module, Fiber. Order one NCM per network node (CPU-640, CPU2-640,NCA, NCA-2). See *DN-6861*.

**RPT-W, RPT-F, RPT-WF:** Repeater board with wire connection (RPT-W), fiber connection (RPT-F), or allowing a change in media type between wire and fiber (RPT-WF). See *DN-6971*.

**NCS5-W-ONYX:** Network Control Station, Wire. UL-Listed graphics PC with mouse, 19" color flat-screen LCD monitor. Order as necessary for network systems. Each NCS consumes one of 103 network addresses. See *DN-6868 (previous NCS-W), ONYX DN-6869*.

**NCS5-F-ONYX:** Network Control Station, Fiber. UL-Listed graphics PC with mouse, 19" color flat-screen LCD monitor. Order as necessary for network systems. Each NCS consumes one of 103 network addresses. See *DN-6868 (previous NCS-F), ONYX DN-6869*.

**ONYXWORKS-NW:** Workstation with NFN **wire** PC card. ONYXWorks workstation GUI software and hardware package for NOTI•FIRE•NET. Includes NFN Gateway (NFNGW-PC-W) wire version. Each ONYXWorks consumes one of 103 network addresses. See *DN-7048*.

**ONYXWORKS-NF:** Workstation with NFN **fiber** PC card. ONYXWorks workstation GUI software and hardware package for NOTI•FIRE•NET. Includes NFN Gateway (NFNGW-PC-F) fiber version. Each ONYXWorks consumes one of 103 network addresses. See *DN-7048*.

**NFN-GW-EM:** NFN Gateway, embedded.

**VeriFire-TCD:** VeriFire Tools CD-ROM. Contains programming software for the ONYX Series. Includes local panel connection cable. See *DN-6871*.

**VeriFireUG-TCD:** VeriFire Tools CD-ROM. Upgrade.

**BAT Series:** Batteries. NFS2-640 utilizes two 12 volt, 18 to 200 AH batteries. This series of products replaces the previous PS Series. See *DN-6933*.

**NFS-LBB:** Battery Box (required for batteries larger than 25 AH).

**NFS-LBBR:** Same as above but red.

**411:** Slave digital alarm communicator. See *DN-6619*.

**411UDAC:** Digital alarm communicator. See *DN-6746*.





# SYSTEM SPECIFICATIONS

## System Capacity

- Intelligent Signaling Line Circuits ..... 1 expandable to 2
- Intelligent detectors ..... 159 per loop
- Addressable monitor/control modules ..... 159 per loop
- Programmable software zones ..... 99
- Special programming zones ..... 14
- LCD annunciators per CPU2-640/-640E and NCA-2 (*observe power*) ..... 32
- ACS annunciators per CPU2-640/-640E ..... 32 addresses x 64 points
- ACS annunciators per NCA-2 ..... 32 addresses x 64 or 96 points

**NOTE:** The NCA-2 supports up to 96 annunciator address points per ACM-24/48.

## Specifications

- Primary input power, **CPU2-640 board:** 120 VAC, 50/60 Hz, 3.0 A. **CPU2-640E board:** 220/240 VAC, 50/60 Hz, 1.5 A.
- Total output 24 V power: 6.0 A in alarm.

**NOTE:** The power supply has a total of 6.0 Amps of available power. This is shared by all internal circuits.

- Standard notification circuits (4): 1.5 A each.
- Four-wire detector power: 1.25 A.
- Non-resettable regulated power outputs: 1.25 A each.
- Battery charger range: 18 AH – 200 AH. Use separate cabinet for batteries over 25 AH.
- Float rate: 27.6 V.

## Cabinet Specifications

Systems can be installed in CAB-4 Series cabinets (*four sizes with various door options, see DN-6857*). Requires BP2-4 Battery Plate.

## Temperature and Humidity Ranges

This system meets NFPA requirements for operation at 0 – 49°C/32 – 120°F and at a relative humidity 93% ± 2% RH

(noncondensing) at 32°C ± 2°C (90°F ± 3°F). However, the useful life of the system's standby batteries and the electronic components may be adversely affected by extreme temperature ranges and humidity. Therefore, it is recommended that this system and its peripherals be installed in an environment with a normal room temperature of 15 – 27°C/60 – 80°F.

## Agency Listings and Approvals

The listings and approvals below apply to the basic NFS2-640 control panel. In some cases, certain modules may not be listed by certain approval agencies, or listing may be in process. Consult factory for latest listing status.

- **UL Listed:** S635
- **ULC Listed:** S635
- **FM Approved**
- **MEA:** 128-07-E, **NYFD:** Certificate #6007
- **CSFM:** 7170-0028:244; 7165-0028:243
- **City of Chicago**
- **City and County of Denver**

## Standards

The NFS2-640 complies with the following UL Standards and NFPA 72 Fire Alarm Systems requirements:

- **UL 864, 9th Edition** (Fire).
- **UL 1076** (Burglary).
- **LOCAL** (Automatic, Manual, Waterflow and Sprinkler Supervisory).
- **AUXILIARY** (Automatic, Manual and Waterflow) (requires TM-4).
- **REMOTE STATION** (Automatic, Manual, Waterflow and Sprinkler Supervisory) (requires TM-4).
- **PROPRIETARY** (Automatic, Manual and Waterflow). *Not applicable for FM.*
- **EMERGENCY VOICE/ALARM.**

HARSH™, NOTI•FIRE•NET™, IntelliQuad™, and ONYXWorks™ are trademarks; and Acclimate® Plus™, FlashScan®, NION®, NOTIFIER®, ONYX®, UniNet®, VeriFire®, and VIEW® are registered trademarks of Honeywell International Inc. Microsoft® and Windows® are registered trademarks of Microsoft Corporation. Echelon® is a registered trademark of Echelon Corporation. IBM® is a registered trademark of IBM Corporation. LEXAN® is a registered trademark of GE Plastics, a subsidiary of General Electric Company.

©2008 by Honeywell International Inc. All rights reserved. Unauthorized use of this document is strictly prohibited.



This document is not intended to be used for installation purposes.  
We try to keep our product information up-to-date and accurate.  
We cannot cover all specific applications or anticipate all requirements.  
All specifications are subject to change without notice.



Made in the U.S.A.

For more information, contact Notifier. Phone: (203) 484-7161, FAX: (203) 484-7118.  
www.notifier.com